


BRUNTON®

SOLO 3.4

Portable power

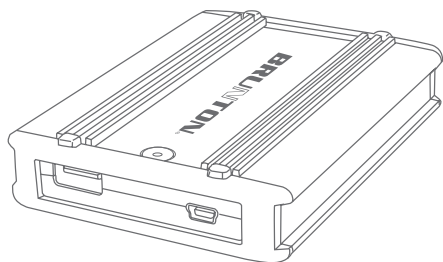

GENERAL SAFETY INFORMATION

This manual contains important information about the assembly; use and maintenance of this product. Keep this manual for future reference. Be sure to read this manual completely before using the Solo. Keep this manual and review it regularly to maintain awareness of procedures and warnings.



1. USB DC Adapter (vehicle adapter)
2. USB AC Adapter (wall adapter)
3. Retractable input/output cord
4. Nokia adapter
5. Ipod adapter
6. Mini USB adapter
7. Motorola adapter
8. Sony Ericson Adapter

CHARGING THE SOLO 3.4 WITH USB AC ADAPTER

1. Plug the Mini USB adapter into the retractable input/output cord
2. Plug the Mini USB adapter into the IN port of the SOLO 3.4
3. Plug the USB end into the USB AC ADAPTER
4. Plug the AC adapter into the wall to charge



The light on the SOLO 3.4 will turn RED. This indicates the SOLO 3.4 is charging. When the light turns GREEN, charging is complete.

CHARGING THE SOLO 3.4 WITH USB DC ADAPTER

1. Plug the Mini USB adapter into the retractable input/output cord
2. Plug the Mini USB end into the IN port of the SOLO 3.4
3. Plug the USB end into the USB DC ADAPTER
4. Plug the DC adapter into a vehicle adapter (cigarette lighter)

BRUNTON, Limited Warranty

Brunton warrants this product to be free of defects in materials and workmanship, for a period of one year. This warranty extends to the original purchaser for one year from the date of purchase.

This Warranty is void and a charge for repair will be made if the Solo has been damaged by negligence, accident or mishandling, or has not been operated in accordance with standard operating procedures, or if the Solo was altered or repaired by other than a Brunton repair facility.

This warranty gives you specific legal rights, and you also have rights, which vary from state to state. No other warranty, expressed or implied, applies to the Brunton product, nor is any person or company authorized to assume any other warranty for Brunton. Brunton does not assume any responsibility for any consequential damages occasioned by this product. Should the product prove defective, contact Brunton, and you will be provided with a Return Authorization Number (RA#). Send a copy of your proof of purchase, the RA#, a short description of the problem and the product to Brunton at the following address. Brunton suggests insuring the product in case of damage or loss in shipment.

Brunton
 Warranty Repair (307) 857-4700
 2255 Brunton Court support@brunton.com
 Riverton, WY 82501 www.brunton.com

The light on the SOLO 3.4 will turn RED. This indicates the SOLO 3.4 is charging. When the light turns GREEN, charging is complete.



Charging the SOLO 3.4 by USB (computer)


1. Plug the Mini USB adapter into the retractable input/output cord
2. Plug the Mini USB end into the IN port of the SOLO 3.4
3. Plug the USB end into a USB port

The light on the SOLO 3.4 will turn RED. This indicates the SOLO 3.4 is charging. When the light turns GREEN, charging is complete.

CHARGING ELECTRONICS (CELL PHONE, IPOD, ETC)

1. Plug the chosen adapter into the retractable input/output cord
2. Plug the USB end of the retractable cord into the out port of the SOLO 3.4

3. Plug the chosen adapter end into the electronic you are trying to charge
4. Push the ON button. The light will turn green, indicating the electronic piece is charging. When the GREEN light begins to flash, the battery level is getting low, recharge the SOLO3.4.

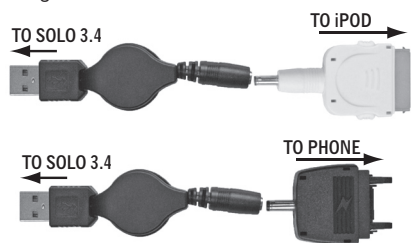

SOLO 3.4 CHARGE TIMES

Cell phone	Run/Charge 2-3H
PDA	Run/Charge 2-4 H
Digital camera	Charge 3-5 H
MP3 player	Run/Charge 2-3 H
Portable video games	Charge 3-5 H
Digital camcorder	Charge 3-5 H
Portable DVD player	Charge 5-8 H

SOLO 3.4 SPECIFICATIONS

Battery type	Lithium Polymer
Output Voltage	5V (USB compatible)
Output Current	3400mAH
Capacity	3.4 amp hours @ 5.5 volts
Output port	Standard USB
Input port	Mini USB
Dimensions	3" x 4.12" x 0.75"
Weight	5.2 ounces

DISPOSING OF YOUR SOLO 3.4

- Do not incinerate or dispose of your SOLO 3.4 in a fire or microwave.
- Do not dispose of your SOLO 3.4 as ordinary refuse.
- Consult your local municipal or civil authority for instructions on correctly disposing of a Lithium-Polymer Battery Pack.

Common Troubleshooting Steps

1. Un-plug and re-plug all connections.
2. Charge the Battery Pack.
3. Test the Battery Pack on another USB device.

BRUNTON Solo 3.4 Warranty Registration

Detach and Return within 30 days of purchase

Name: _____
 Address: _____
 City: _____ State: _____ Zip: _____
 Phone: _____
 Date Purchased: _____
 Amount Paid: _____

Would you like to receive a Brunton Catalog? () Yes () No

Please let us know where you purchased your Solo
 Store Name: _____
 City: _____ State: _____ Zip: _____
 () On-Line site () Catalog
 () Gift () Brunton () Other _____

Do you own another Brunton Product?
 () Yes. Product: _____ () No.

I decided to buy this product because of ...
 () Features () Gift () Recommendation
 () Magazine () Catalog () Store Display
 () Salesperson () Newspaper

This Solo will be used for ...
 () Camping () Occupation () Sporting Events
 () Vacation () Travel () Education
 () Other: _____